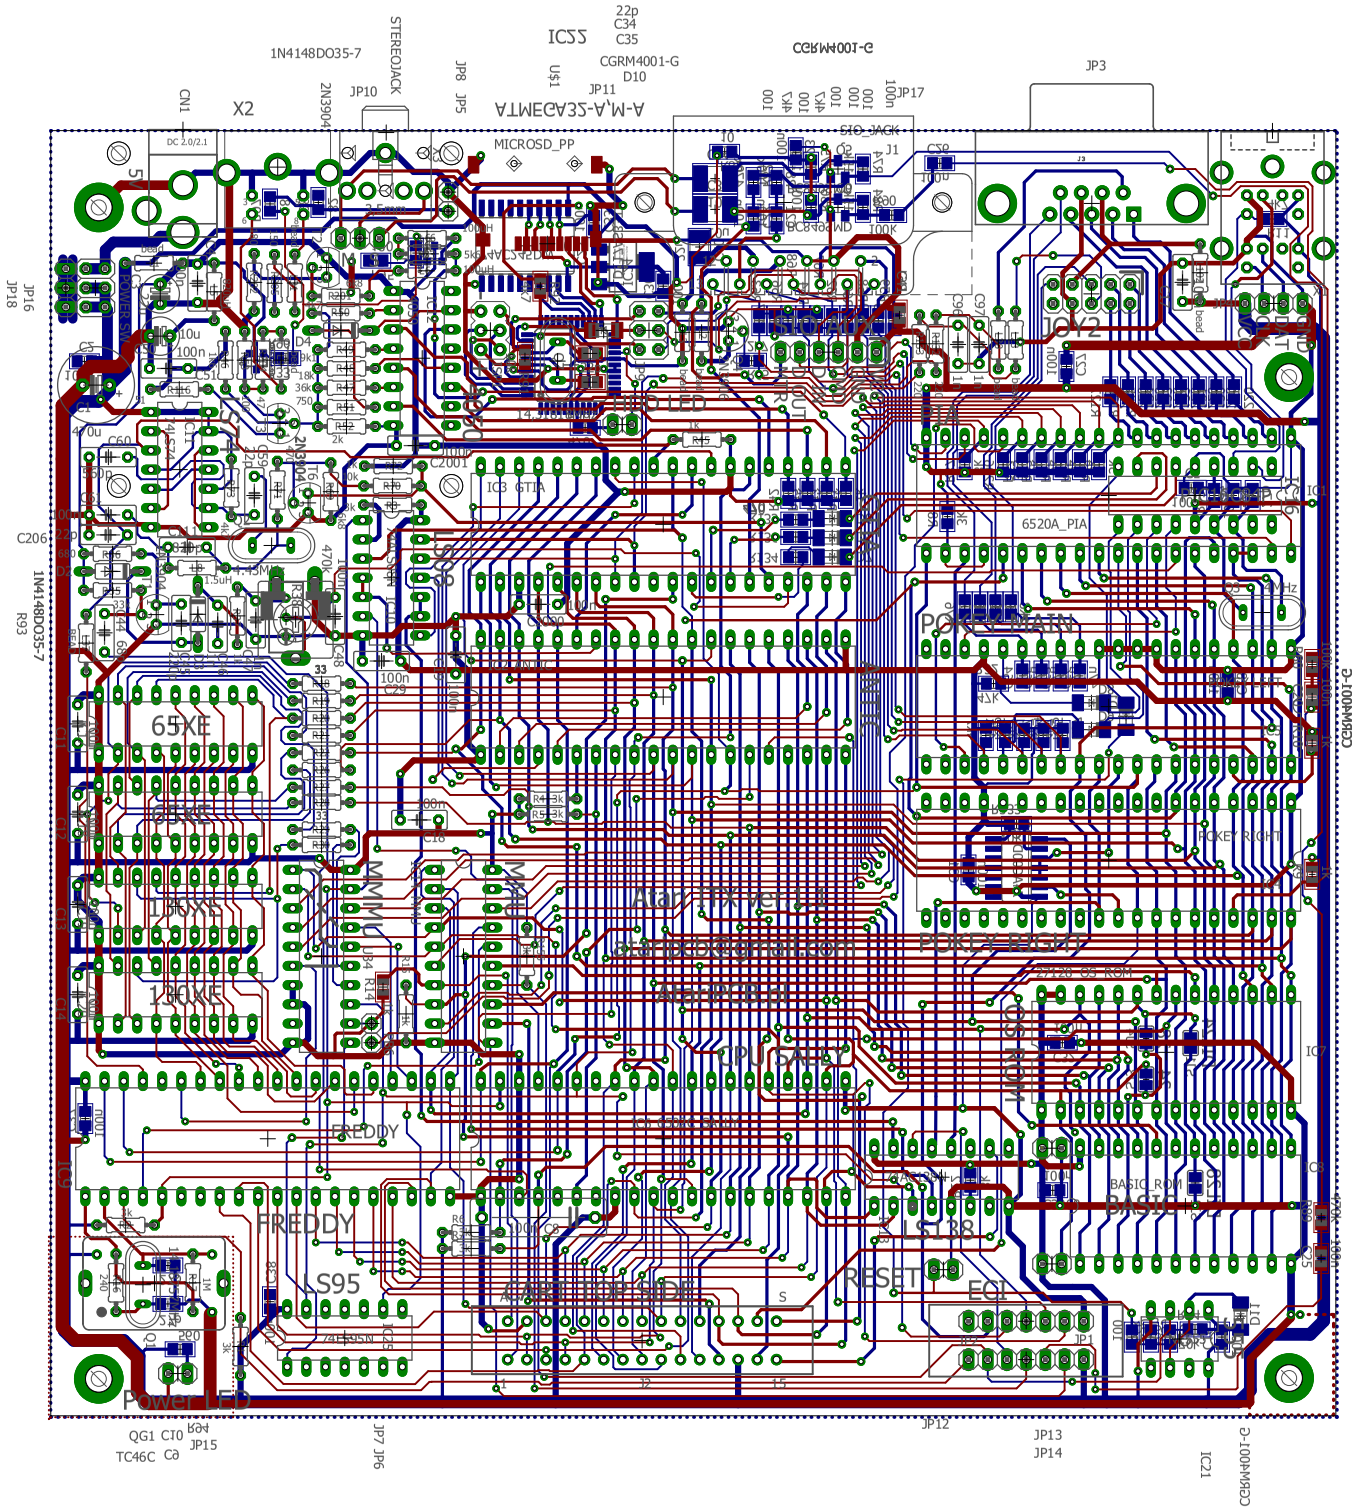
65XE
FREDDY
LS95
LS138
RESET
ECL
CPU BAT
BASIC ROM
6520A_PIA
Power LED
JOY2
JOY1
1N4148DO35-7
STEREOJACK
MICROSD_PP
CGRM4001-G
22p
C34
C35
D10
JP3
JP17
JP16
JP18
JP15
JP7
JP6
JP12
JP13
JP14
IC21
C206
R93